

Cool Cube™ 96 at Frozen Temps (Varicella, MMRV, Zoster & FFP)

Model: FT-96




The Cool Cube™ 96 at Frozen Temperatures is not an ordinary transport cooler. It is an easy-to-carry, qualified container and pack-out system that keeps temperature sensitive product (varicella, MMRV, zoster, Fresh Frozen Plasma) frozen between -50° and -15°C for over 5.5 days – without using ice or electricity! This cooler is ideal for transport, but also excels at protecting valuable product during off-site use and power outages, regardless of hot conditions. The simple, validated, patented technology is the best compact thermal protection product available to maintain the cold chain!




Qualified Pack-Out System


Remove PCM Panels

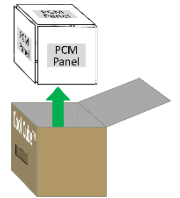


Prep PCM Panels

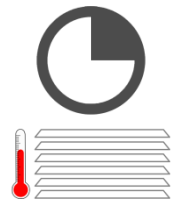

Assemble PCM Panels

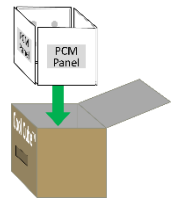

Pack-Out Product

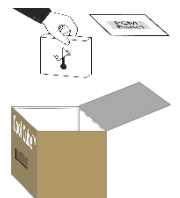

Close Case



Features

- 6 patented PCM panels (Crêdo™ Series 20M) manage the temp
- Temp-Shield™ vacuum insulated panel (VIP) system
- Rugged, military spec case with large lifting handles & wheels
- Validated under ISTA Test Procedure 7D (Int'l Safe Transit Assoc)

Specifications

Temperature Range
-50° to -15°C (-58° to 5°F)

Performance
139+ Hours

Payload Area
18" x 18" x 18"

Exterior Dimensions & Weight
26½" x 26½" x 28¼" @ 134lbs

- 1 Folding handle for ease of movement.
- 2 Holder and flexible grommet enables the use of an external temp monitor.
- 3 Multi-directional locking wheel system.
- 4 Six removable, temperature-controlling, PCM panels ensure a simple, quick & effective pack-out.

Go to Web Page >>



info@VeriCorMed.com
(866) 469-6019

For more information & pricing: www.VeriCorMed.com

